

Where Warmth Meets Serenity



Model : WRH-PTC302W

Read all the instructions carefully before you use the appliance and keep it for future use.

PREFACE

Congratulations on purchasing the Walton Room Heater. This simple and easy to use manual will guide you to get the best use of your room heater. It contains many useful instructions including helpful hints regarding the usage and maintenance of your room heater. Also, in this manual, you can find the solutions to simple problems that you might face while using the appliance.

Read this manual carefully and save it for future use.

CONTENTS

01. PRECAUTIONS	1-2
02. INSTALLATION	2-3
03. OPERATION INSTRUCTIONS	3-8
04. CLEANING AND MAINTENANCE	9
05. SPECIFICATIONS	9

PRECAUTIONS

To avoid hazard while using your appliance, follow simple precautions including the following:-

- The heater should be hung on the wall and make the wind outlet down or placed it on a flat appliance. Don't place it precipitately or tipily.
- Please do not use the heater in a place where full of combustible or explosive gas. Do not cover the wind outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any hazard.
- The heater must not be located immediately below an electrical socket. The electrical socket must be equipped with earth wire; its capacity should be 250~10A. The socket and the power plug should be in a good connecting condition.
- If no one is using or you are repairing the heater, please pull off the power plug.
- Please do not touch the heater by the wet hand or other conductors.
- If the motor is not working properly, please stop it immediately.
- During the use of the heater, please do not open the door or window frequently, otherwise, that will influence the heating effect.
- If you want to shut down the heater, press the on/off switch to shut it down, then the heater will keep the fan working for 30 seconds until it's blowing out the cool wind. Then the heater will stop working, and you may pull off the plug.
- Please remove the baffle, before using the remote control.
- If you do not use the remote control, please put the insulation paper back into the remote control to ensure that the battery power is enough.
- The heater must be installed at least 2 m above from the floor.
- If the heater needs to repair, please ask for a special person or the company authorized maintenance department.
- This appliance is not intended for use by persons of reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the usage of the appliance by a person responsible for their safety.


PRECAUTIONS

- Children of less than 3 years should be kept away unless continuously supervised.
- Children under the age of 3 or 8 can only turn on or off the appliance, if the heater is properly installed and also in the normal operating position, also with the instructions of the user application of the heater and an idea of the hazards associated with it. Children under the age of 3 or 8 years will not plug in, control, and clean or maintain the appliance.
- Caution**-Some parts of this product can become very hot and cause burns, so particular attention has to be given where children and vulnerable people are present.
- Packing materials may be dangerous for kids. Please keep all packing materials (plastic, nails etc.) far away from children.

INSTALLATION

- ⚠ The heater shall be installed and used according to the safety standard.**
- To avoid any hazard, follow these safety instructions-
- The installation must be done by the service agent or similarly qualified persons to avoid a hazard.
 - Warning!** make sure that there are no electrical cables or other installations (for example, water pipes) near the drill holes, ensure that the appliance is securely and vertically fixed on the wall.
 - Make two holes in the wall (2 m from the floor and another 25 mm towards the corner), be sure to make the diameter just as same as the expanding pipe. Fix two screws on the expanding pipe, keep the tips of the screw out for 10 mm, and hang up the machine after the screws are fixed enough.

INSTALLATION

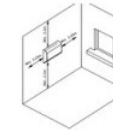

OPERATION INSTRUCTION

- Before inserting the plug into an electrical outlet, make sure that the electrical supply of your area matches with the rating label of the unit.
- Carefully remove the plastic bag and the carton from the heater.
- Place the heater on a firm level surface, setting the master button to '1' position. Plug in the cord set into an AC220-240V electrical outlet, with BEE sound the power light will be on.

OPERATION INSTRUCTION

- General Using Operation**
 - Turn the heater ON by pressing On/Off button of the remote control, the air will come out from the unit and "ON" light will be on.
 - Pressing the "MODE" button on remote control, the warm air will come out from the unit, both "ON" and "MODE" lights will be on.
 - Pressing the "MODE" button three times on the remote control, cold air will come out and "Fan/M" light will be on.
 - Pressing the "ON/OFF" button on the remote control, the unit will swing lower up and down. Pressing again to close the swing function.

PS: For smart operation, customer only press the one start button near about master button, the heater will working with hot air and both "ON" and "MODE" lights will be on.

Smart Button View



OPERATION INSTRUCTION

- 24 H Timer Function**
 - Activate this application through remote control by pressing "Timer" button. (It's applicable for fan, warm and hot function operation).
 - Press "Timer" button to set the timer up to 24 hours, keep pressing "Timer" button to increase the hours from 00:00-24:00 (01:00=1 hour...24=24.00 hours ect.) and the "Timer" light will be on.
 - PS: Set as "00:00" means timer is not set yet, the "Timer" light will be off.
- Thermostat Instructions**
 - To use this application only through remote control (It's applicable for fan, warm and hot operation).
 - To adjust temperature, press the "Temp" to set the desired temperature and the temperature set from 10°C to 49°C.
 - When the air temperature drops 2 degree below the set temperature, the heater will start heating with "ON" (2000W).
 - When the air temperature high 1 degree or 5 the set temperature, the cold air will come out from the heater.
- Weekly Timer Function**
 - Activate this application through remote control (It's applicable for fan, warm and hot function operation).
 - Turn on the heater, set the time as real time.
 - WEEK** - Press "Set" button, "1" light will twinkle, press "WEEK" these two buttons will set the week from 1-7 (1=Monday...7= Sunday ect.)
 - HOUR** - Press "Set" button again, LED display from "00" will twinkle, press "HOUR" these two buttons set the minutes from 01-00 (01=1 o'clock, 02=2 o'clock...00=24 o'clock ect.)
 - MINUTE** - Press "Set" button once again, LED display behind "00" will twinkle, press "MINUTE" these two buttons set the minutes from 01-59 (01=1 minute, 02=2 minute ect.)

OPERATION INSTRUCTION

- PS:** Press "Set" button, screen shows number will twinkle for 5 seconds, you should operate in time, otherwise, appliance will get back to standby. (Appliance will keep the right time until the power goes off)
- Weekly Timer Settings**

WEEK - Press "WEEK" button 1st time, "1" light will on means "Monday" in case of Tuesday after pressing "WEEK" button once, "2" light will be on.

HOUR - Press "HOUR" button 2nd times, LED display front "00" will twinkle, press "HOUR" these two buttons set the hours from 01-00 (01=1 o'clock, 02=2 o'clock...00=24 o'clock ect.)

MINUTE - Press "MINUTE" button 3rd times, LED display behind "00" will twinkle, press "MINUTE" these two buttons set the hours from 00-59 (01=1 minute, 02=2 minute ect.) with the press "MINUTE" light on, it means open time.

Hour - Press "HOUR" button 4th times, LED display front "00" will twinkle, press "HOUR" these two buttons set the hours from 01-00 (01=1 o'clock, 02=2 o'clock...00=24 o'clock ect.)

MINUTE - Press "MINUTE" button 5th times, LED display behind "00" will twinkle, press "MINUTE" these two buttons set the hours from 00-59 (01=1 minute, 02=2 minute ect.)


The "Timer" light will on, it means close time.

Note-From Monday to Sunday, when all the settings are finished, press "ON/OFF" button on remote control, 7th times to set from Monday to Sunday's temperature and Press "Temp" these two buttons, select the temperature which you need, the temperature range from 10 °c to 49 °c

(you can set different open time, close time and temperature within whole week).

OPERATION INSTRUCTION

- Window Open Function**
 - Window will only be open when the appliance is working. This function only through by Remote control.
 - Press "Window" button, the "Window" light will on. The appliance is working as smart saving energy models. (In this function, the appliance will check and record environment temperature in immediately, it will stop working, when the appliance will check, the environment dropped 3 within 1 minute. The user should restart the appliance with "ON/OFF" button.
 - Press "Window" button again, the "Window" light will off. Window Open Function will be closed.
- Child-Lock Function**
 - This function can only operate through remote control.
 - Press "Child-Lock" button once, all lights and LED display will be closed, only "Power" light on. In this condition, either control panel or remote control can not operate the appliance for any function.
 - Press "Child-Lock" button again, all lights will on and both control panel and remote control will use to succeed.

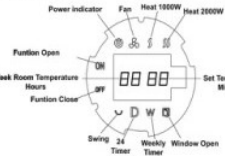

OPERATION INSTRUCTION

- Remote Control View**
 - Remote control, please use Lithium battery CR2025 3V.
 - The remote control power button is labelled as such
-
- "ON/OFF" Main power button
 - "24H" Setting timer from 1-24 hours
 - "MODE" COLD,WARM,HOT 3 setting for selection
 - "Swing" Louver swing up and down
 - "AUTO" Child-Lock function for heater
 - "AUTO" Window Open Function
 - "Tem." Display real time
 - "Delay" Set temperature for weekly function
 - "W.Timer" Set the timer of one week
 - "1" Increase
 - "2" Decrease
 - "Set" Set real time

- Overheat Protection**

This room heater has an overheat protection system that switched off the appliance automatically in case of overheating. For example, due to the total or partial obstruction of the vents, unplug the heater, wait about 30 seconds to cool down, and remove the object which is obstructing the vents. Then switch it back on as described above. The appliance should now operate normally. If the problem persists, please contact customer service for assistance.

CLEANING & MAINTENANCE

- Before undertaking any cleaning or maintenance on the appliance, disconnect it from the power supply.
- To clean the appliance, kindly use a soft damp cloth, neutral detergent. Check that the hot air outlet and the ventilation inlet are free of dust and dirt to clean it regularly.
 - During cleaning, be careful not to touch the heating elements.
 - To open the filter on the back for cleaning, press the top of the plastic net on back.
 - In case of breakdown or poor functioning of the appliance, disconnect it from the power supply, and contact an authorized technician.
- Note:** As a result of continual improvements, the designs and specifications of the product within may differ slightly to the unit illustrated on the packaging.
- Correct disposal of this product**

This product should not be disposed of with other household wastes to prevent possible harm to the environment or human health from uncontrolled waste disposal.

SPECIFICATIONS

Model Name	Voltage	Power
WRH-PTC302W	220-240V 50/60Hz	2000W



Walton Service Management System (Central)
Chandra, Katakior, Gazipur, Bangladesh, e-mail: support@waltonbd.com
Service center's address & others information may be changed to ensure quality customer service for all.

Please contact us for any service/information: 1637 or 661231637

